


CURB RAMPS INSTALLATION GUIDE


1

Using proper safety equipment, drill 2 holes as indicated by the black dots in the picture below.

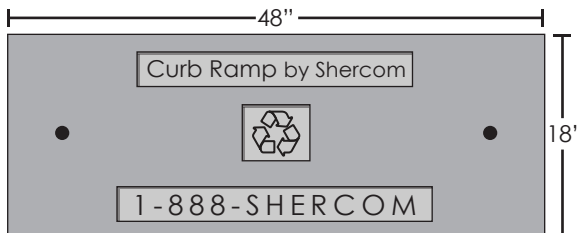

2

Clean the curb of any sand and debris. Place Curb ramps in desired position. For angled driveways you can trim ramps for perfect fit. The Curb Ramps will conform and settle to gutter.

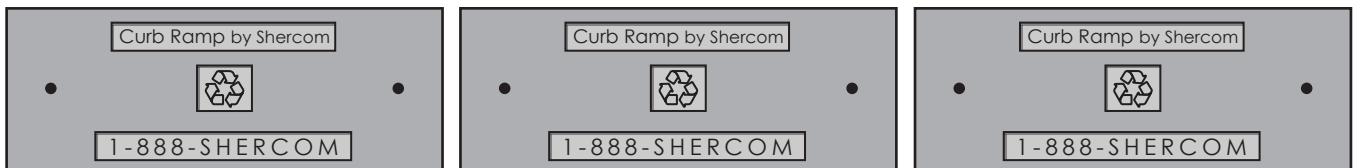

3

Use the Heavy-Duty Connectors provided to loop around the two nearest holes. Pull the connectors to tighten and secure the Curb Ramps in place. Tighten connectors and cut off remainder for a cleaner look. From time to time you may need to adjust the alignment.

